


HONDA CR250 MAINSHAFT ASSEMBLY

(*92-'00 SPECIFY YEAR
WHEN ORDERING PARTS)

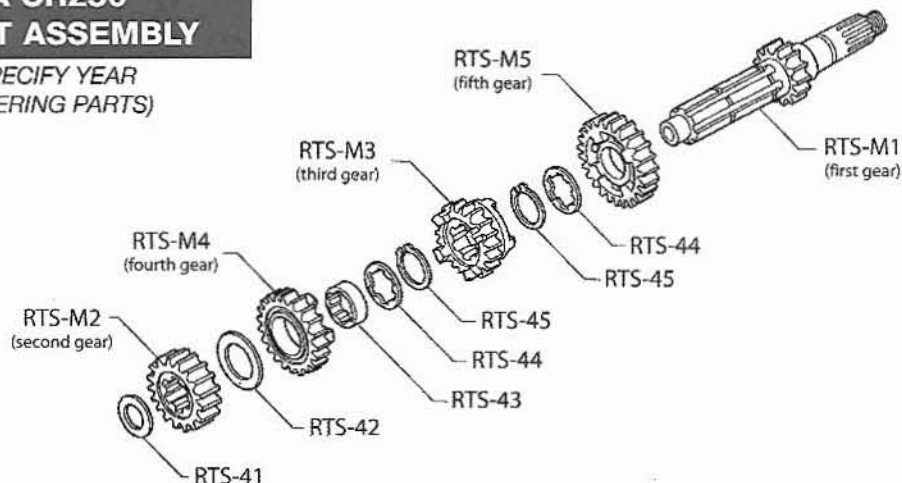


CATALOG #	ITEM ID	DESCRIPTION
RTS-41	Hond0632	Washer Between Main 2nd & Case
RTS-42	Hond0617	Washer Between Main 2nd & 4th
RTS-43	Hond0182	4th Gear Main Shaft Collar
RTS-44	Hond0611	Splined Washer
RTS-45	Hond0705	Transmission Snap Ring
RTS-M1	Hond0179	Main Shaft
RTS-M2	Hond0109	2nd Main Shaft Gear 86 - 87
RTS-M2	Hond0112	2nd Main Shaft Gear 88 - 01

CATALOG #	ITEM ID	DESCRIPTION
RTS-M3	Hond0124	3rd Main Shaft Gear 86 - 87
RTS-M3	Hond0129	3rd Main Shaft Gear 88 - 01
RTS-M4	Hond0139	4th Main Shaft Gear 88 - 01
RTS-M4	Hond0140	4th Main Shaft Gear 86 - 87
RTS-M5	Hond0157	5th Main Shaft Gear 84 - 87 / 89 - 01
RTS-M5	Hond0158	5th Main Shaft Gear 2002
RTS-M5	Hond0158M	Machined 5th Main Shaft Gear 2002
RTS-M5	Hond0160	5th Main Shaft Gear 88

HONDA CR250 COUNTERSHAFT ASSEMBLY

(*92-'00 SPECIFY YEAR
WHEN ORDERING PARTS)

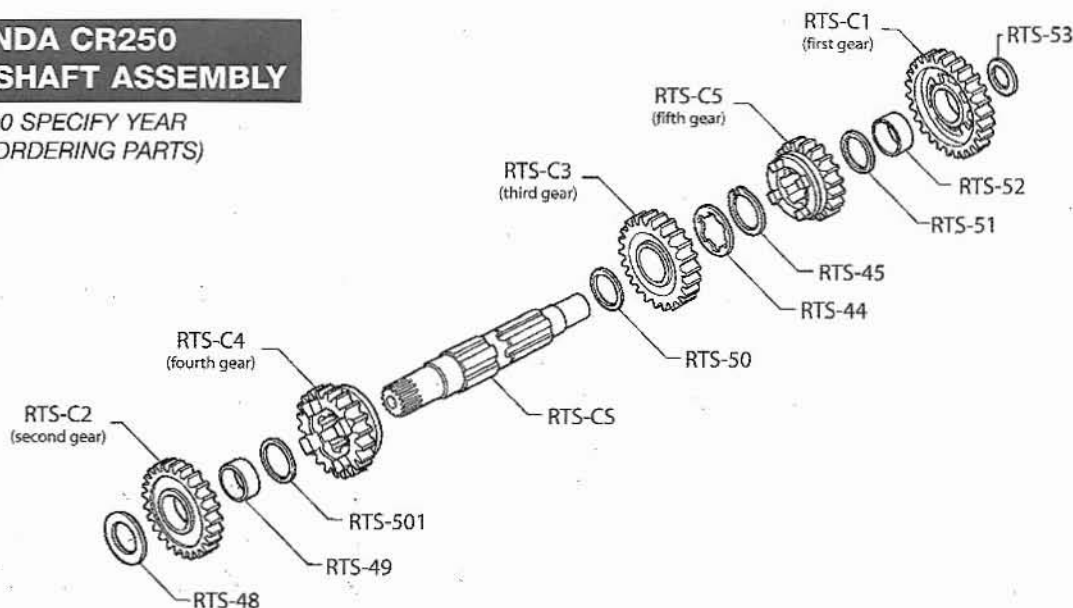

CATALOG #	ITEM ID	DESCRIPTION
RTS-44	Hond0611	Splined Washer
RTS-45	Hond0705	Transmission Snap Ring
RTS-48	Hond0620	Washer Between Counter 2nd & Case
RTS-49	Hond0605	2nd Counter Collar
RTS-50	Hond0623	Washer Between Counter 3rd & 4th
RTS-51	Hond0614	Washer Between Counter 1st & 5th
RTS-52	Hond0608	1st Counter Shaft Collar
RTS-53	Hond0629	Washer Between Counter 1st & Case
RTS-501	Hond0626	Washer Between Counter 2nd & 4th
RTS-C1	Hond0100	1st Gear CS 86 - 87 / 89 - 01
RTS-C1	Hond0103	1st Gear 88

CATALOG #	ITEM ID	DESCRIPTION
RTS-C2	Hond0118	2nd Counter Shaft Gear 88 - 01
RTS-C3	Hond0133	3rd Counter Shaft Gear 88 - 01
RTS-C3	Hond0135	3rd Counter Shaft Gear 86 - 87
RTS-C4	Hond0145	4th Counter Shaft Gear 86 - 87
RTS-C4	Hond0148	4th Counter Shaft Gear 88 - 91
RTS-C4	Hond0151	4th Counter Shaft Gear 92 - 01
RTS-C5	Hond0166	5th Counter Shaft Gear 84 - 87 / 89 - 01
RTS-C5	Hond0169	5th Counter Shaft Gear 88
RTS-CS	Hond0178	Counter Shaft